

**FUNTRONIX**  
**SCORE-N-TIME™**  
**MID-SIZED**  
**PORTABLE WIRELESS TENNIS**  
**SCOREBOARD**

OPERATING MANUAL  
Model SNT-300T

Revised October 27, 2015

 **WARNING:**  
CHOKING HAZARD - Small Parts.  
Not for children under 3 years.

The contents of the package may contain parts and packing materials that can be hazardous to children under 3 years old. These components must be handled with adult supervision.



While the optional wall-mount power supply is UL approved, care must be taken when plugging the power supply into a standard wall outlet, as this is a source of dangerous high voltage.

**ADDITIONAL WARNING:**

Staring directly at the scoreboard display at close range for long periods of time may cause eye strain or eye damage.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

Thank you for purchasing a Funtronix Score-N-Time™ Portable Electronic Scoreboard. At Funtronix, our motto is "Electronic Fun for Everyone". By offering a line of affordable electronic scoreboards, our goal is to add a little fun to your sports and leisure activities.

Before using your new scoreboard, please read the following precautions. Doing so will reward you with many years of enjoyment with your new scoreboard. Failure to follow them may cause bodily harm or may damage the scoreboard beyond the terms of the warranty.

1. *DO NOT* expose the scoreboard or keypad to rain or other condensed moisture.
2. *DO NOT* store the scoreboard or keypad in direct sunlight for extended periods of time.
3. *DO NOT* drop or hit the scoreboard, as this may result in injury and/or void the warranty.
4. *Do NOT* use abrasives or spray cleaning solutions onto the scoreboard or keypad. See Section 5 for care and maintenance.
5. *DO* read the entire owner's manual so that you will utilize the full potential and versatility of your new scoreboard.

## TABLE OF CONTENTS

SECTION	PAGE
Product Features and Highlights	4
Section 1: Scoreboard Setup	5
Section 2: Using your scoreboard	6
Section 3: Charging the keypad remote	7
Section 4: Pairing the scoreboard and keypad	7
Section 5: Care and Maintenance	8
Section 6 Troubleshooting Guide	8
Section 7: Product Specifications	9

## PRODUCT FEATURES


- 15-channel wireless RF remote-controlled keypad operates up to 200 feet from scoreboard\*
- Large 6-inch score digits
- Outdoor-readable LED display
- 4-inch Games-Won and Sets-Won displays
- Fold-out legs for standing scoreboard up on a table or floor
- Powered by batteries\*\* for portability or optional AC adapter (purchased separately)
- Aluminum frame construction

\* *Outdoor open-field environment.*

\*\* *Requires 8 C-size alkaline batteries for the scoreboard and two AAA-size batteries for the keypad.*

## SECTION 1: SCOREBOARD SETUP


1. If you are using the scoreboard **without** an AC adapter, open the two battery covers located on the back-side of the scoreboard and install 8 C-size alkaline batteries (not included). Close the battery covers.
2. Charge the keypad battery as described in **Section 3**.
3. Swivel out the support legs as shown and place the scoreboard on a stable surface (floor, table, etc).
4. Use the optional AC adapter if operating the scoreboard near an electrical outlet to conserve batteries.

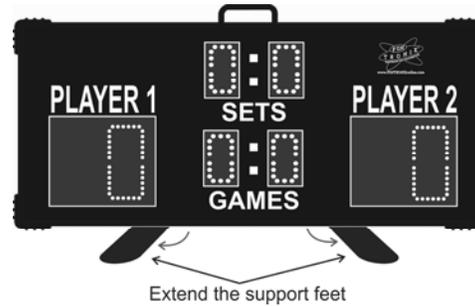

**NOTE:** *If you are using the scoreboard outdoors, aim the display away from the sun for best visibility.*

5. Place the scoreboard in a desired location near your playing field. The best location is mid-court on the sidelines. This will provide the best view of the display. It can also be placed in the corner of the playing field, as long as everyone in the opposite corner of the field can view it and is within radio range of the keypad.
6. Test the operation of your scoreboard to verify performance over the distance between the keypad and scoreboard prior to the start of your game. Move the scoreboard closer to the keypad if it does not respond as expected.
7. You are now ready to use your scoreboard. Proceed to **Section 2** for instructions on using your scoreboard in your game.

## SECTION 2: USING YOUR SCOREBOARD

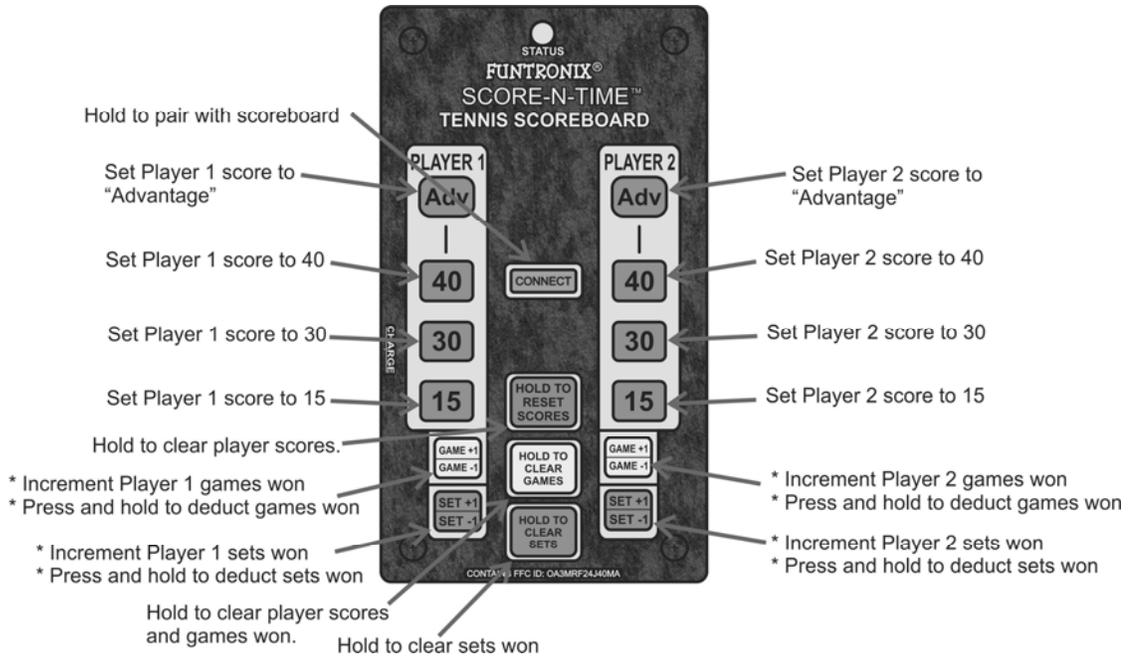


LAYOUT OF THE SNT-300T SCOREBOARD KEYPAD

1. To control the player scores, press the Player 1 or Player 2 **15**, **30**, **40**, and **Adv** buttons as needed. You can go back and forth between "40" and "Adv" as many times as necessary.
2. To clear scores, press and hold the **HOLD TO RESET SCORES** button for approximately 3 seconds.
3. Press either the Player 1 or Player 2 **GAME +1** / **GAME -1** button to increment the respective player's games-won display. Holding this button down for 3 seconds will decrement the games-won display for the respective player.
4. To clear the games-won display and player scores, press and hold the **HOLD TO RESET GAMES** button for approximately 3 seconds.
5. Press either the Player 1 or Player 2 **SET +1** / **SET -1** button to increment the respective player's sets-won display. Holding this button down for approximately 3 seconds will decrement the respective player's sets-won display.
6. To clear the current match, press and hold the **HOLD TO RESET MATCH** button for approximately 3 seconds.

### SECTION 3: CHARGING THE KEYPAD REMOTE

The wireless keypad contains a rechargeable battery. We recommend charging your keypad the night before each use of the scoreboard.


The charging indicator will light up orange to indicate the keypad is charging, and will turn green when fully charged.

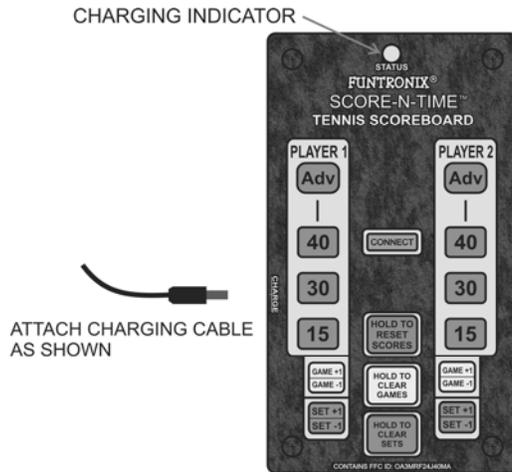

Plug keypad charger into 120VAC wall outlet after plugging charger into keypad

### SECTION 4: PAIRING THE SCOREBOARD AND KEYPAD

1. Cycle the scoreboard power off and on (waiting 3 seconds before each turn-on) until the scoreboard is displaying the keypad RF connection screen shown below at right. Make certain only one scoreboard in the vicinity is showing this display at any given time, otherwise the pairing process will fail.

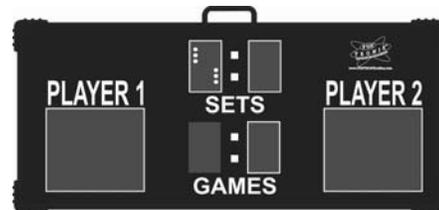

RF connection screen

2. Press and hold the **CONNECT** button on the keypad for up to 10 seconds (until the keypad emits a beep). The scoreboard will go through a process of reconnecting to the keypad and will respond after a few seconds by displaying the radio channel number. The keypad will beep twice if the connection is good, or 3 times if the connection failed. Repeat this step if necessary to establish a connection.
3. After a couple seconds the scoreboard will show a normal display and is then ready for action.

## SECTION 5: CARE AND MAINTENANCE

Keep your scoreboard clean for optimum viewing of the display.

- Never spray cleaning solutions directly onto the scoreboard or keypad.
- Use only ammonia-free window cleaning solution.

To clean your scoreboard, spray the cleaner onto a clean cloth. Lightly wipe the scoreboard or keypad with the damp cloth until clean. To eliminate fine scratches on the front panel – apply a small amount of carnuba car wax on a terry cloth and lightly wipe the front panel.

## SECTION 6: TROUBLESHOOTING GUIDE

**Symptom:** Keypad remote doesn't appear to work or scoreboard fails to connect to keypad.

**Solutions:**

1. Keypad-scoreboard range may be too far. Move the scoreboard closer to the keypad.
2. Charge the keypad. See **Section 3** for details.
3. Re-establish radio connection between scoreboard and keypad as described in **Section 4**.

**Symptom:** Scoreboard won't turn on or display is dim.

**Solution:** Replace the batteries in the scoreboard.

**Symptom:** Display 'blinks' when a button is pressed on the keypad.

**Solution:** This is normal.

## **SECTION 7: PRODUCT SPECIFICATIONS**

*(Product specifications subject to change without notice)*

### **FUNCTIONAL SPECIFICATIONS:**

Score Digit Range: 0 to 60 points  
Total Number of Games: up to 9 per player  
Total Number of Sets: up to 9 per player  
Keypad Operating Range: up to 200 feet (outdoors open-field with fresh batteries installed in the keypad)

### **ELECTRICAL SPECIFICATIONS:**

Operating Voltage: +12 volts DC

### **BATTERY REQUIREMENTS / LIFE EXPECTANCY**

Scoreboard: 8 x C-size alkaline batteries  
Up to 20 hours continuous use – high brightness level  
Remote Keypad: 2 x AAA batteries/up to 1 year

### **POWER ADAPTER SPECIFICATION:**

Use Only Funtronix AC adapter 120VAC input, 12V 1.4 A DC output.  
Part Number: PS-12V-3000: 5.5mm x 2.1mm barrel connector, center-positive.

### **MECHANICAL SPECIFICATIONS:**

Dimensions: 36 inches wide, 15 inches tall, 2 ¼ inches deep  
Weight: approximately 12 pounds

### **ENVIRONMENTAL SPECIFICATIONS:**

Operating Temperature: 0 C to 50 C  
Storage Temperature: -10 C to +55 C  
Humidity: 0 to 95% non-condensing

Write down your product serial number for your records.

SN: \_\_\_\_\_

Please visit our website for new products and accessories for your scoreboard:

www.funtronixonline.com



**Funtronix LLC**  
29834 N. Cave Creek Rd  
Suite 118-273  
Cave Creek, AZ 85331  
email: sales@funtronixonline.com